

FW2561-RI Remote Indicator



DESCRIPTION

The FW2561-RI Remote indicator is a component that provides supplementary visual indication of the device status connected with it. It is compatible with mini Input product miniInput Module FW2811M 、 Smoke detector FW2511 、 Heat detector FW2521, and shall be located in the same room as miniInput Module FW2811M 、 Smoke detector FW2511 、 Heat detector FW2521.

ATTENTION

The products must be installed in accordance with the NFPA 72, the CAN/ULC-S524, the CAN/ULC-S536, and the Canadian Electrical Code depending on the country of installation. Check information of equipment used in the system by other manufacturers for any guidelines or restrictions.

NOTE

Do not paint this device.

Any material extrapolated from this document or from Maple Armor's instructions or other documents describing the product for use in promotional or advertising claims, or for any other use, including description of the product's application, operation, installation, and testing is the sole responsibility of the user. Maple Armor will not assume any liability for such use. In no case will Maple Armor's liability exceed the purchase price paid for a product.

SPECIFICATION

Operating Voltage	4.8 to 28VDC
Active Current	2.5 mA max
Operating Temperature	14°F to 131°F (-10°C to 55°C)
width	2.76in (70mm)

Height	4.49in (114mm)
Deep	1.3in (33mm)
Operating Humidity	0% to 95% RH (Non-Condensing)

INSTALLATION

1. Mount the module into electrical box

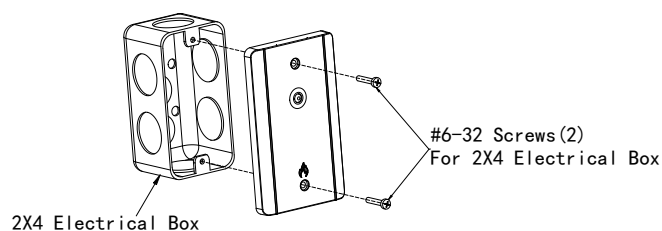


Figure 1 module installation

2. Wire the Remote indicator to the compatible device as described in the installation manual of the compatible devices.



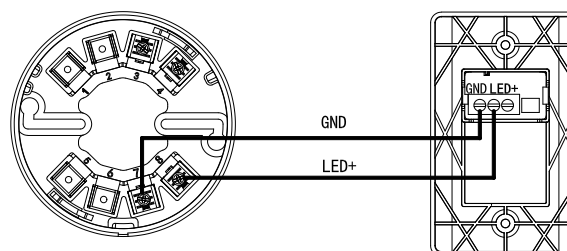


Figure 2 Wiring Diagram with FW2501

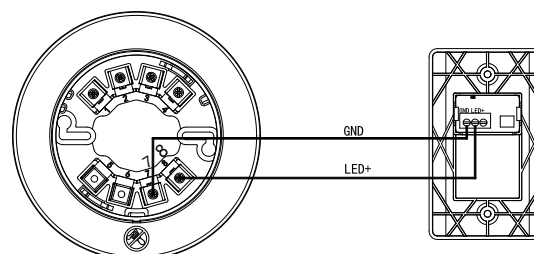

FW2502

Figure 3 Wiring Diagram with FW2502

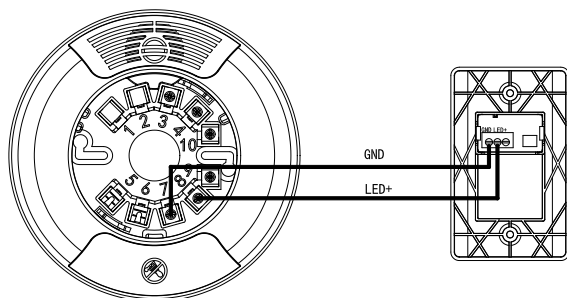

FW2509

Figure 4 Wiring Diagram with FW2509

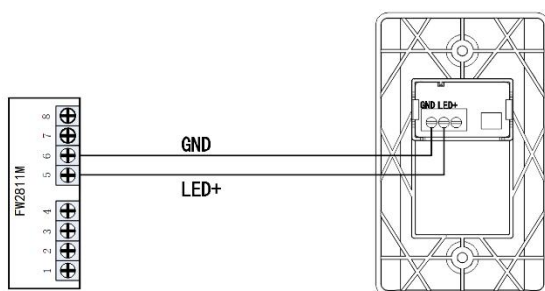


Figure 5 Wiring Diagram with FW2811M

MAINTENANCE

Return the module for repair if it fails to flash or activate. Do not disassemble the module without permission.